

## **ICOP-XS** accessory for cloning SEO-SIP and Level I SE

***Note:** This development is only available for Level I readers with configuration-enabled legacy card reception capabilities .*

***Note:** This development will not apply to all **Level I** self-readers.*

***Note:** Upgrade **the ICOP-XS** firmware to **1.0.84***

### **ICL-Heritage Ice-**

#### **Elite**

Information system services----- system services/system services----- system services

All **Class I** cards are written in one go.

---

#### How to use **it**?

(1) Connect the IC decoder to the ICOP-XS via the provided Type-C cable.

Note:

- If the IC decoder is unresponsive, reconnect.

- Please wait for the ICOP-XS response to the IC decoder. It usually takes 1-5 seconds to launch the screen.



2)Swipe the card on the IC decoder.



- On ICOP-XS, the screen will display the CSN, facility code, and card number.



3) Disconnect the integrated control system decoder from the integrated control system.



4)At this stage, the card has been successfully read. ICOP-XS will prompt you to:

The ICOP-XS antenna section places a new IC clone card and continues the cloning process.



## **What's included?**

1x IC decoder

3x Level Self-Clone Card (one write).

1x to Type C cable