



Download SVXX01A-Tools first:

[https://www.sysjoint.com/ueditor/php/upload/file/SVXX01A\\_Tools.zip](https://www.sysjoint.com/ueditor/php/upload/file/SVXX01A_Tools.zip)

1. Upgrade SVXX01A to V0.7.2 and connect to the PC.
2. Uninstall and delete the older driver of SVXX01A, then reconnect SVXX01A to the PC.
3. Open the "USB-driver-zadig-2.3" software where in the "SVXX01A-Tools" folder:

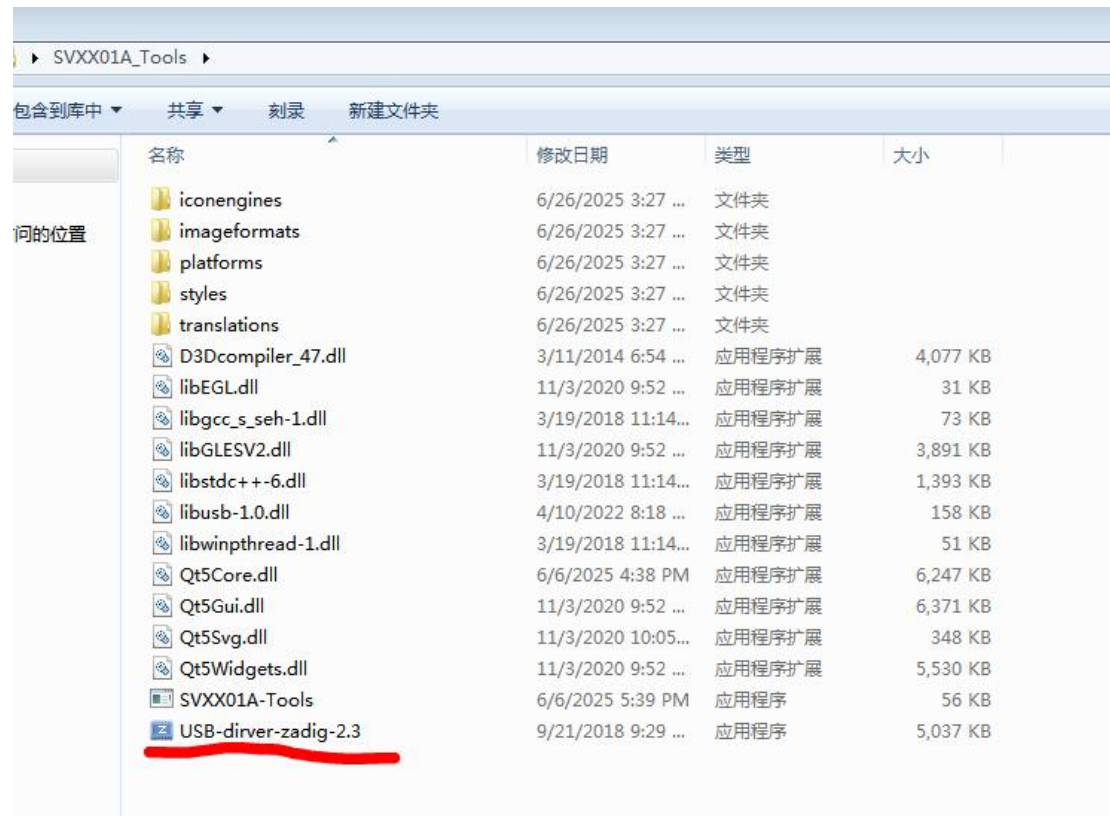


4. Follow the step 1-2-3 to install the WinUSB driver.

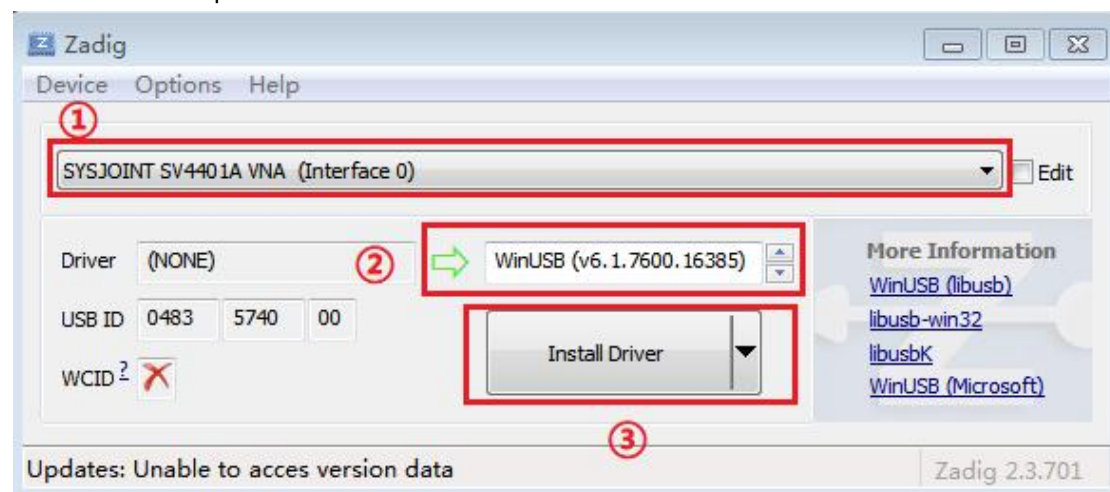




5. Follow the step 1-2-3 to install the USB CDC driver.

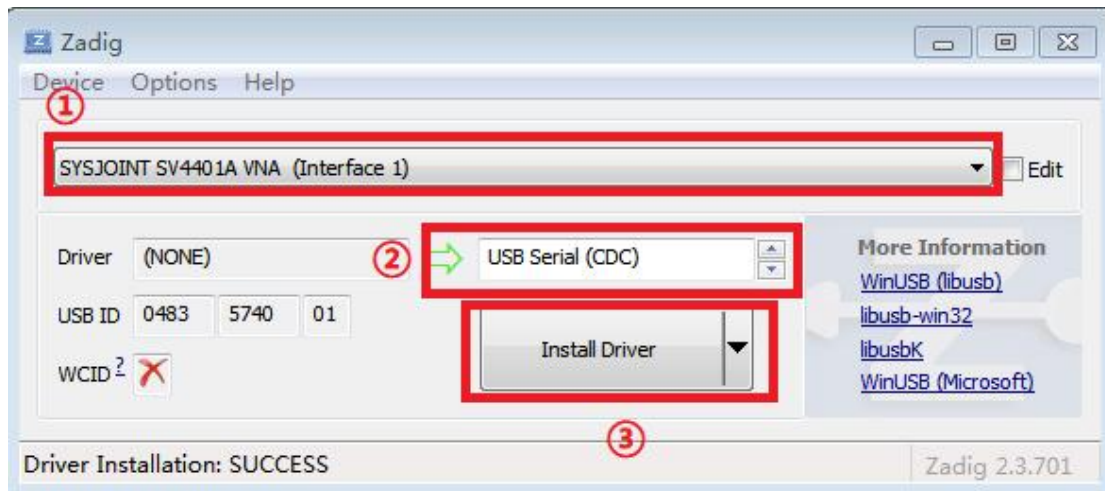


6. Open the Device Manager, and the following device identifiers will show below:

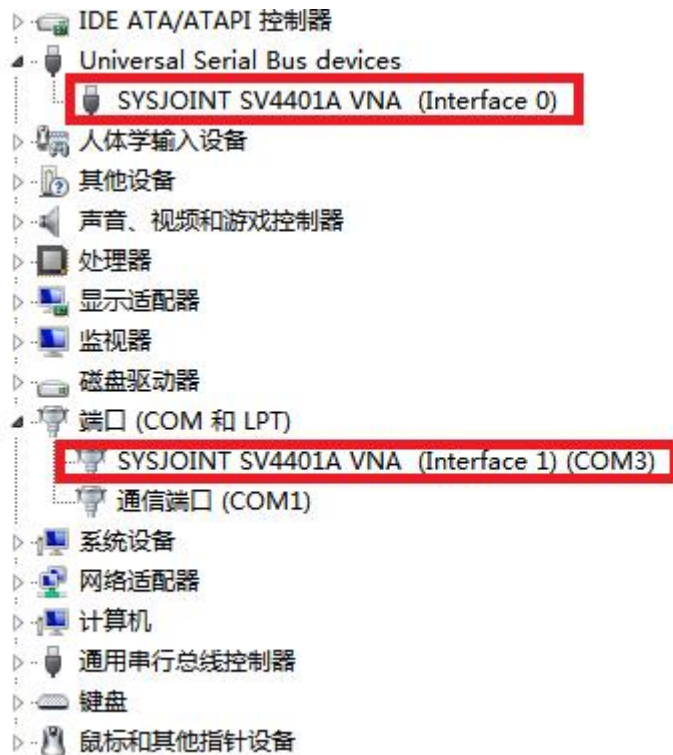

Run the SVXX01A-Tools software, the screen will show as below and try to click with left mouse button.

If there is a response, it means that the WinUSB driver is working correctly.

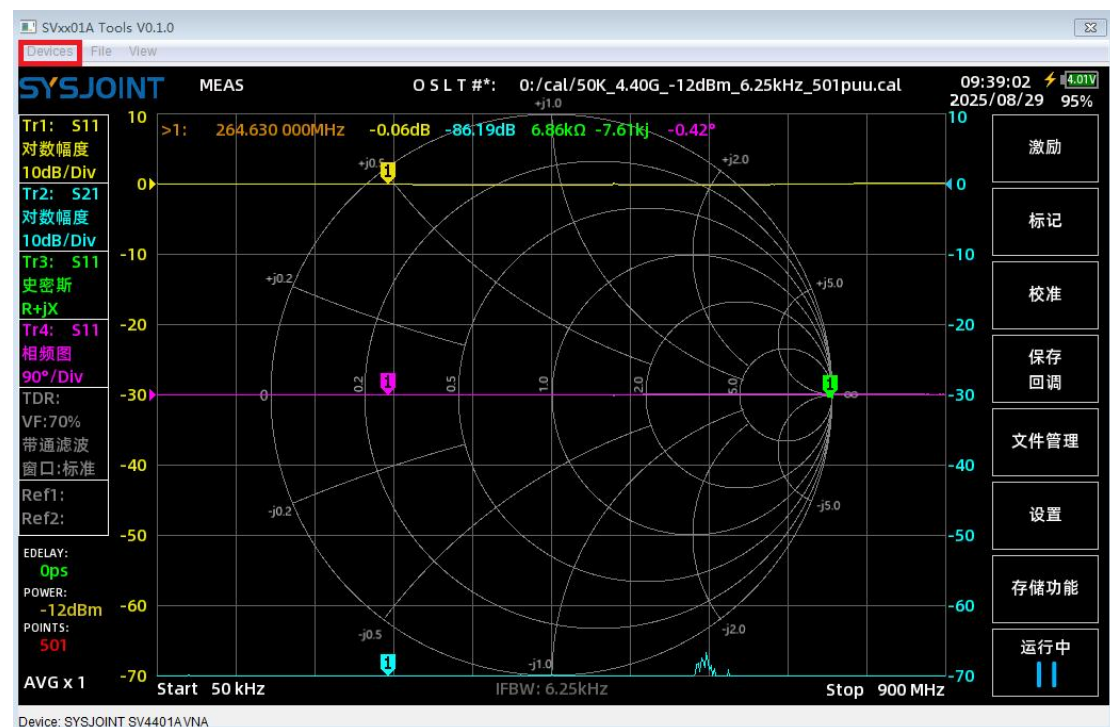

Test the USB CDC driver, run the NanoVNA-APP software.

Download: <https://github.com/sysjoint-tek/NanoVNA-App/releases>:

